

## BodyTastic DX-96RV Explosive Diagram

Version : 105.11.1		0096RVK7U00		Explosive diagram Version: 1.0			
Item No.	Tonic PN	Chinese Name	English Name	Specification		Unit	Remark
1	100096RC014B	車架總成DX-96RC(鐵灰色亮面)	Frame Assembly	無電表&運動棒用孔 No console or holes for bars		SET	1
2	2	A13096RC004B	前貼地桿總成DX-96RC(鐵灰色)	Front Stabilizer Assembly	40*80*2.0t*500L	SET	1
	2-1	130096RC004B	前貼地桿總成DX-96E(鐵灰色)	Front Stabilizer	國邦:BL166-1(BL166-3)BP-879MS	PC	1
	2-2	3530067	輔助輪黑色(透明之PVC外層)	Transportation Wheels	黑色之HUB內套(含軸承) Black Color with bearing	PC	2
	2-3	700059819100	白鐵平面華司(白鐵原色)	Stainless Washer	M8( $\phi 19 \times \phi 8.5 \times 1t$ )	PC	4
	2-4	70011080	白鐵尼龍螺母	Stainless Nylon Nut	M8x1.25(SUS304)	PC	2
	2-5	700300804500	白鐵螺絲(六角)	Stainless Screw (Hex)	M8*1.25*45L S=15	PC	2
	2-6	70015018	六角螺母(SUS304)	Hex Nut	$\phi 3/8" * 16T * 8t$ (對邊14mm) (Across side length 14mm)	PC	2
	2-7	52023610	調整腳墊DX-950D(螺絲UCP)四角頭	Foot	$\phi 3/8" * 16T * 42.8L$ (吾友:AS004)	PC	2
3	3	A13096RC014B	後貼地桿總成DX-96E(鐵灰色)	Rear Stabilizer Assembly		SET	1
	3-1	130096RC014B	後貼地桿總成DX-96E(鐵灰色)	Rear Stabilizer	40*80*2.0t	PC	1
	3-2	70015018	六角螺母(SUS304)	Hex Nut	$\phi 3/8" * 16T * 8t$ (對邊14mm)	PC	2
	3-3	52023610	調整腳墊DX-950D(螺絲UCP)四角頭	Foot	$\phi 3/8" * 16T * 42.8L$ (吾友:AS004)	PC	2
4	520696E3	座管膠套DX-96E TONIC模具	Sleeve	PP黑色	PC	2	
5	2025108	天心主軸組環星型(加耐落)	Bottom Bracket	VORTEX ISD 12 113/68永弘辰	PC	1	
6	6	A18595RV00	大多溝皮帶輪總成	Pulley & Crank Assembly		SET	1
	6-1	2022ST010001	曲柄固定組ST-01(BED)	Right Crank Assembly	155*130*170L(右腿+曲柄盤)(Including Disk and Crank)	PC	1
	6-2	232195RV0001	大多溝皮帶輪	Pulley	260*20L ADC12	PC	1
	6-3	700290801012	對鎖螺絲組	Mutual locked screws	M8 RCW-085	PC	5
	6-4	202101302	左腿	Left Crank	9/16"*20TPI-左牙(S18C環星型)(Left-handed screw threads)	PC	1
7	7	A12296RC08	煞車座組DX-96RC(BED)	Magnetic Brake Assembly	t=5.0 SS41	SET	1
	7-1	326316M	永久磁鐵DX96R(S極標記記號)錦詮	Magnetic	25*8t 鈷鐵硼N35	PC	6
	7-2	4527100M	軸承LF-1910ZZ	Bearing	F6800 W5 ZZ	PC	2
	7-3	30243710	煞車座(右)DX-96RC(BED)	Magnetic Brake (Right)	t=5.0 SS41	PC	1
	7-4	30243810	煞車座(左)DX-96RC(BED)	Magnetic Brake (Left)	t=5.0 SS41	PC	1
	7-5	3012020	煞車墊片總成SW-05	Brake Pad	57*23.2*14.8mm	PC	1
	7-6	700300404000	白鐵螺絲(圓頭十字)	Stainless Screw (Phillip-head)	M4x0.7x40L SUS304	PC	2
	7-7	70011040	白鐵尼龍螺母	Stainless Nylon Nut	M4x0.7	PC	2
	7-8	7902066	煞車座連接片SW-05(BED)	Brake Connection Plate	t=1.5 SPHC	PC	2
	7-9	7031066	銅襯套SW-05	Brass Bushing	8*4*2.7L粉末冶金(銅系)(Powder metallurgy)	PC	2
7-10	700300401000	白鐵螺絲大扁圓頭(十字)	Stainless Screw (Flat and Phillip head)	M4x0.7x10L	PC	2	
8	7034112	扭力螺旋彈簧SW-05(UCP)	Resetting Spring	琴鋼線SWP 線徑2.0	PC	1	
9	700391004500	白鐵螺絲(圓頭內六角)	Stainless Screw (Hex)	M10*1.5*45L SUS304	PC	1	
10	#####	白鐵平面華司	Stainless Washer	( $\psi 10.2 \times \psi 16 * 1t$ )	PC	2	
11	70011100	白鐵尼龍螺母	Stainless Nylon Nut	M10x1.5	PC	1	
12	A12296RC03	煞車桿組DX-96RC(TONIC)#185C紅	Brake Knob Assembly	大旋鈕頭	PC	1	

## BodyTastic DX-96RV Explosive Diagram

Version : 105.11.1		0096RVK7U00		Explosive diagram Version: 1.0			
Item No.	Tonic PN	Chinese Name	English Name	Specification		Unit	Remark
12	12-1	7302041006	阻力旋鈕頭(長)DX-96RC紅色185C	Brake Knob	PP耐衝擊大旋鈕頭(φ50.2*41.7L)	PC	1
	12-2	50080201	大旋鈕飾蓋DX-96RC(紅185C)	Brake Cap	φ43.2*5.5L細咬花 PP耐	PC	1
	12-3	3012029	煞車桿96RC	Brake Rod	φ10*278L M8*M5 (SUS304)	PC	1
	12-4	700210400804	圓頭內六角螺絲(黑鍍)	Inner Hex Screw (Nickel)	M4x0.7x8L 鉻鉬鋼	PC	1
	12-5	50080184	旋鈕護蓋DX-96E(紅色)#185C	Brake Cover	細咬花PP耐衝擊φ35*28 (Good for resistance impact-PP material)	PC	1
13	70011081	白鐵尼龍螺母	Stainless Nylon Nut	M8x2.0左牙SUS304 (Left-handed screw threads)	PC	1	
14	790296RC00U1	煞車調整塊DX-96RC(UCP)	Brake Adjustment Bracket	t=15 SS41	PC	1	
15	70011050	白鐵尼龍螺母	Stainless Nylon Nut	M5*0.8(SUS304)	PC	1	
16	70016100	白鐵拉帽六角頭	Stainless Blind Nut (Hex)	六角形對邊7*M5*0.8(SUS304)	PC	8	
17	7031066	銅襯套SW-05	Brass Bushing	8*4*2.7L粉末冶金(銅系)(Powder	PC	2	
18	700300401000	白鐵螺絲大扁圓頭(十字)	Stainless Screw (Flat and Philip head)	M4x0.7x10L	PC	2	
19	19	A10096RV01	鑄輪總成DX-96RV(鐵灰色)	Flywheel Assembly	皮帶輪, 鋁環鐵灰亮面+#185C紅圈 (Including smally Pulley)(Alluminum Ring is in gray)	SET	1
	19-1	4541SW050010	鑄輪DX-96RC噴黑漆	Flywheel	362.2*37*51H FC25	PC	1
	19-2	7906524B1	感應鋁環96RC鐵灰色+內圈185C紅	Aluminum Ring	457.2*8t A360	PC	1
	19-3	700390501600	白鐵螺絲(扁圓頭內六角)	Stainless Screw (Flat and Hex head)	M5*0.8*16L 內六角對邊3mm	PC	6
	19-4	453195RV01	花鼓組DX-95RV(3軸承6000ZZ)	Hub	搭配皮帶輪用	PC	1
	19-5	240095RV00	小多溝皮帶輪(5PK)DX-95RV	Small Pulley	60*20L 6061 陽極處理	PC	1
	19-6	2005014	鎖緊螺母(左牙)黑BED	Nut	BCψ1.29x24Tx4t	PC	1
	19-7	67220012	鑄輪貼紙(右)DX-96RC(全黑)	Flywheel Sticker (Right)	φ243*φ65mm PC 0.25霧面	PC	1
		67220045	鑄輪貼紙左(全黑)DX-96RC	Flywheel Sticker (Left)	φ269*φ65mm PC 0.25霧面	PC	1
	19-8	50080003	花鼓護蓋SW-01(黑色PVC)	Hub Cap	φ60*φ22*48L	PC	1
19-9	326315M	永久磁鐵SW-05(S極標註記號)	Magnetic	9.5*5L*3850高斯鈷鐵錳	PC	1	
20	790100004B	拉鏈調整塊DX-96E(鐵灰色)	Fastened Plates for Tension Adjustment	t=5.0 SPCC	PC	2	
21	700140030	法蘭式螺母	Nut	BCψ3/8"x26Tx8t(SUS304)	PC	2	
22	700059616100	白鐵平面華司(白鐵原色)	Stainless Flat Washer (for belt tension adustment)	M6(φ16xφ6.5x1t)	PC	9	
23	700310609000	六角螺絲(白鐵)	Stainless Screw (Hex)	M6*1.0*90L(有效牙長25L)SUS304	PC	2	
24	700059612150	平面華司	Washer	φ12*6.5*1.5t(SUS304)	PC	2	
25	700080818200	尼龍華司	Nylon Washer	8.2x18x2.0t	PC	1	
26	700051120200	花紋華司(白鐵)	Stainless Washer	φ10.5xφ20x1.5t	PC	2	
27	790596E00A1	止滑板總成DX-96E(貼膜含背泡棉)	Foot Rest	t=1.0 SUS304	PC	1	
28	700390601200	白鐵螺絲(扁圓頭內六角)	Stainless Screw (Inner Hex)	M6x1.0x12L	PC	7	
29	70012061	袋帽	Cap Nut	M6*1.0(SUS304)	PC	2	
30	500196RV08	內鏈蓋DX-96RV(黑色)新	Inner Belt Guard	ABS(新增缺口)	PC	1	
31	500196RV05	外鏈蓋DX-96RV/RC(黑色)	Outer Belt Guard	ABS	PC	1	
32	A26096EA00	車手總成DX-96EA(浸PVC黑色)可調	Handlebar Assembly		SET	1	
	32-1	351296EA00P0	車手總成DX-96EA(浸PVC黑色)可調	Handlebar	PC	1	
	32-2	700230802512	平錐內六角螺絲(CP)加藍色耐落	Inner Hex Screw (with blue Loctite)	平錐內六角螺絲(CP)加藍色耐落	PC	2

## BodyTastic DX-96RV Explosive Diagram

Version : 105.11.1		0096RVK7U00		Explosive diagram Version: 1.0				
Item No.	Tonic PN	Chinese Name	English Name	Specification		Unit	Remark	
32	32-3	351196EA02T6	車手立桿總成DX-96EA(可調式)	Handlebar Post Assembly (Adjustable)	T6 A6061(期美模具)紅#185C旋鈕	PC	1	
	32-4	790296EA0400	車手立桿面板DX96EA(調整式)8孔	Handlebar Post Selector	t=2.0 SUS304 改短	PC	1	
	32-5	700330300600	平錐螺絲(白鐵)	Stainless Screw	M3*0.5*6L	PC	2	
	32-6	700300400800	白鐵螺絲小扁圓頭(十字)	Stainless Screw (Flat and Philip head)	M4*0.7*8L	PC	4	
	32-7	351896EA02T6	車手調整座(上)DX-96E	Handlebar Horizontal Adjustment Bracket	46*36*190L A6061	PC	1	
	32-8	351896EA01T6	車手調整拉緊塊DX-96E(期美模具)	Handlebar Horizontal Adjustment Stick	9.5*8*175L A6061(陽極/T6)	PC	1	
	32-9	7302060009	拉式旋鈕組DX-96E(長)	Pop-in Assembly	M8*6.5*31 φ4(SUS304)	PC	1	
	32-10	73021270	插銷座長DX-96E(UCP)	Pin	M12*M8*30L S15C	PC	1	
	32-11	A81096E002	調整旋鈕組DX-96E(紅旋鈕185C)	Adjustment Knob	φ42*31.5L ABS細咬花(車手用)	PC	1	
	32-12	50080184	旋鈕護蓋DX-96E(紅色)#185C	Adjustment Knob Cover	旋鈕護蓋DX-96E(紅色)#185C	PC	1	
	32-13	67090004	調整旋鈕貼紙DX-96E(黃底黑邊)	Adjustment Knob Sticker	φ28 PVC	PC	1	
	32-14	5008041	下飾蓋(後)DX-96E(黑色)	End Cap (Down, Rear)	咬花 MT-11040	PC	1	
	32-15	5008039	上飾蓋(後)DX-96E(黑色)	End Cap (Up, Rear)	MT-11040 咬花	PC	1	
	32-16	5008040	下飾蓋(前)DX-96E(黑色)	End Cap (Down, Front)	咬花MT-11040	PC	1	
	32-17	5008038	上飾蓋(前)DX-96E(黑色)	End Cap (Up, Front)	MT-11040(咬花)	PC	1	
	33	33	A42096RC05	座墊管及調整座組裝總成DX-96RC	Seat Post and Adjustment Bracket Assembly	(正常版/調整架205L)紅#185C旋鈕	SET	1
		33-1	352296RC00T6	座墊管總成DX96RC(T6/噴砂/陽極)	Seat Post Assembly	31*62*3.0t*515L(A6061)	PC	1
33-2		352196E05T6	座墊調整拉緊塊DX-96E(陽極T6)	Seat Tension Stick	9.5*8*190L A6061(期美模具)	PC	1	
33-3		5008044	下飾蓋(前)DX-96RC黑色	End Cap (Down, Front)	咬花 PP t=1.2	PC	1	
33-4		5008045	下飾蓋(後)DX-96RC黑色	End Cap (Down, Rear)	咬花 PP t=1.2	PC	1	
33-5		700300400800	白鐵螺絲小扁圓頭(十字)	Stainless Screw (Flat and Philip head)	M4x0.7x8L	PC	4	
33-6		352196RC00T6	座墊調整座焊接小總成DX-96RC	Seat Adjustment Bracket	A6061(噴砂加陽極)	PC	1	
33-7		5008043	上飾蓋(前)DX-96RC黑色	End Cap (Up, Front)	咬花 PP	PC	1	
33-8		5008042	上飾蓋(後)DX-96RC黑色	End Cap (Up, Rear)	PP t=1.2 咬花	PC	1	
33-9		790296EA0200	座墊管面板DX-96E(材質原色)	Seat Post Selector	t=2.0 SUS304	PC	1	
33-10		700330300601	平錐螺絲(白鐵)加藍色耐落劑	Stainless Screw (with blue Loctite)	M3*0.5*6L	PC	2	
33-11		7302060013	拉式旋鈕組(短)DX-96RC電解	Pop-in Assembly	φ10*26L	PC	1	
33-12		A81096E003	調整旋鈕總成DX-96E紅#185C旋鈕	Adjustment Knob Assembly	φ42*31.5L (ABS細咬花)	PC	1	
33-13	67090004	調整旋鈕貼紙DX-96E(黃底黑邊)	Adjustment Knob Sticker	φ28 PVC	PC	1		
34	A16096RC01	防汗護蓋(左)總成DX-96RC	Sweat Protection Guard (Left)	ABS	PC	1		
35	A16096RC02	防汗護蓋(右)總成DX-96RC	Sweat Protection Guard (Right)	ABS	PC	1		
36	35240102103	座墊(維樂#VL-3061)全黑無LOGO	Saddle	UCP管束	PC	1		
37	500796RC01P0	水壺架總成DX96RC(PVC黑霧)單翼	Bottle Holder Assembly	固定片加補強肋	PC	1		
38	67090005	阻力旋鈕貼紙DX-96E(紅底Stop)	Resistance Knob Sticker	φ28 PVC	PC	1		
39	7034117	壓縮彈簧DX-96RC( Flywheel)	Compression Spring	1.5*12*40L*7圈 SUS304	PC	1		
40	203100J51515	多溝皮帶	Belt	PK5*1515L	PC	1		
41	700300501200	白鐵螺絲(圓頭十字)	Stainless Screw (Philip-head)	M5x0.8x12L	PC	6		
42	700059819100	白鐵平面華司 白鐵原色	Stainless Washer	M8(φ19xφ8.5x1t)	PC	8		
43	700390601500	白鐵螺絲(扁圓頭內六角)	Stainless Screw (Inner Hex)	M6x1.0x15L	PC	2		
44	700390805500	白鐵螺絲(扁圓頭內六角)	Stainless Screw (Inner Hex)	M8x1.25x55L	PC	4		
45	70011080	白鐵尼龍螺母	Stainless Nylon Nut	M8x1.25(SUS304)	PC	4		

## BodyTastic DX-96RV Explosive Diagram

Version : 105.11.1		0096RVK7U00		Explosive diagram Version: 1.0			
Item No.	Tonic PN	Chinese Name	English Name	Specification		Unit	Remark
46	700059819100	白鐵平面華司(白鐵原色)	Stainless Washer	M8( $\phi$ 19* $\phi$ 8.5*1t)		PC	1
47	7007024	鋁質墊圈SW-05陽極處理	Alloy Washer	30*22.2*5t AL6061		PC	1
48	7302060006	煞車固定旋鈕	Brake Fixing Nut	$\phi$ 30*18L SUS304電解		PC	1
49	700390601500	白鐵螺絲(扁圓頭內六角)	Stainless Screw (Inner Hex)	M6*1.0*15L		PC	2
50	500896E1M	前飾蓋DX-96E	Sweat Protection Guard (Front)	PP黑色		PC	1
51	730296E00	拉式旋鈕組DX96RC(T Logo四角頭)	Pop-in Assembly	插銷79L*9.0頭,旋塞M12*1.5		SET	2
52	2034220210	腳踏組(鍍光VP-S2)	Pedals	9/16" CM無反黑(732L/702NLT)		SET	1
53	53	A29195RV00	V型惰輪組裝總成	Idle Arm Assembly	(UCP)	SET	1
	53-1	791595RV0020	V型惰輪總成	Idle Arm		PC	1
	53-2	7031071	襯套	Cap	26*18.5*6.5L粉末冶金銅系	PC	1
	53-3	45270510	軸承(6003LLU)	Bearing		PC	4
	53-4	7036013	C型扣環	C Clip	$\phi$ 17軸用	PC	2